


LOBERON

COMING HOME




Ax1	Bx1	Cx2	Dx2	Ex1	Fx10	Gx6	Hx4
		 $\phi 6\text{mm}$ $\phi 18\text{mm}$	 $\phi 6 \times 55\text{mm}$	 $\phi 6\text{mm}$	 $\phi 3.5 \times 40\text{mm}$	 $\phi 6 \times 30\text{mm}$	


1

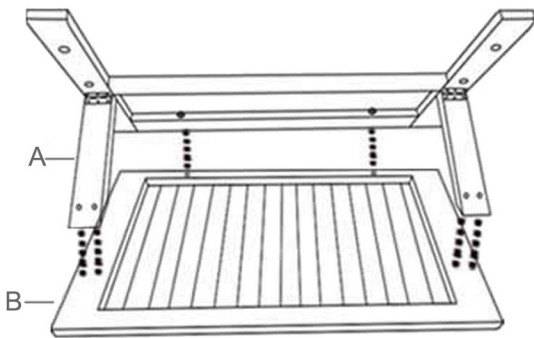

2

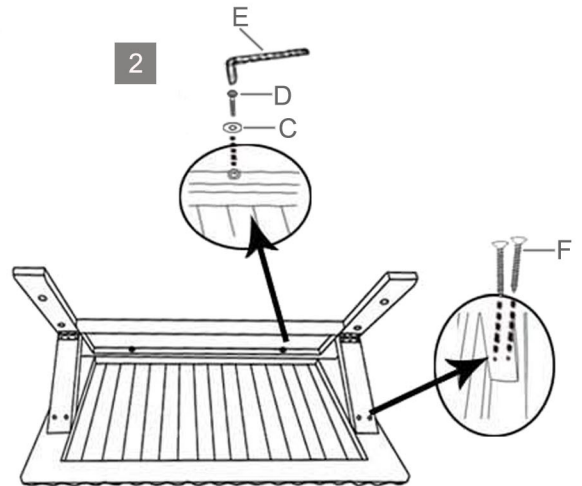

3

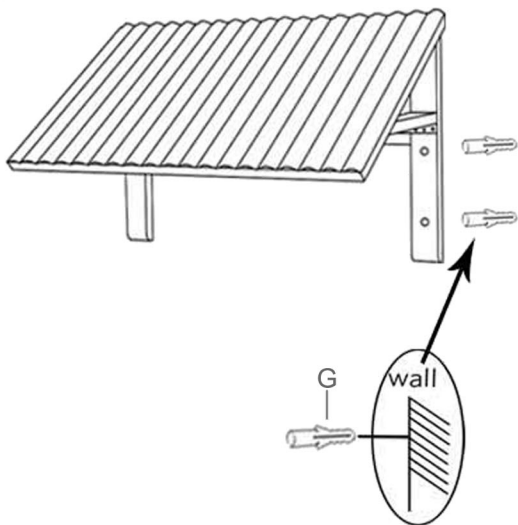

Drill 6mm pilot holes

4

