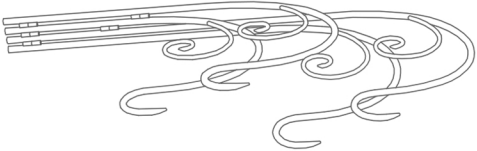

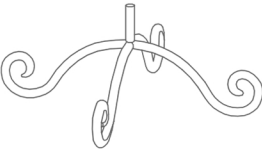

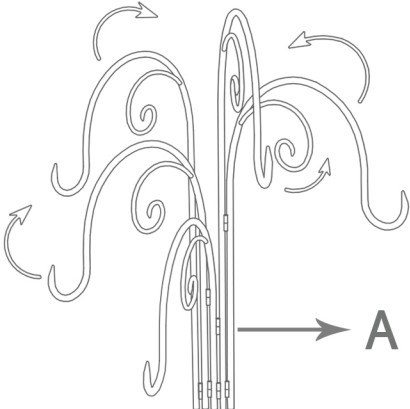
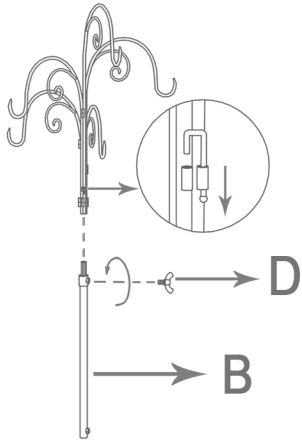
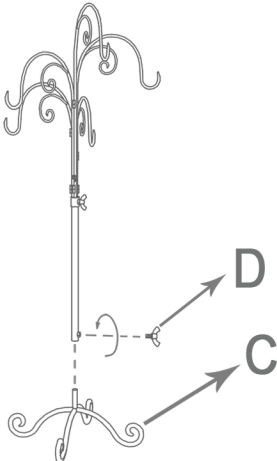
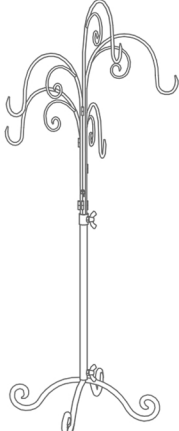


LOBERON

COMING HOME



Ax1 	Bx1 
Cx1 	Dx2 

1  <p>Diagram showing the uncoiling of the decorative frame (Ax1) into its upright position. Arrows indicate the direction of movement. Label A points to the bottom of the frame.</p>	2  <p>Diagram showing the long rod (Bx1) being inserted into the frame. A circular inset shows a close-up of the rod's end fitting into the frame. Label B points to the rod, and label D points to the top of the frame.</p>
3  <p>Diagram showing the decorative base (Cx1) being attached to the bottom of the frame. Label C points to the base, and label D points to the top of the frame.</p>	4  <p>Diagram showing the final assembled product, a decorative floor lamp.</p>

